

IMPORTANT

WIRING CONNECTION & INSTALLATION BEST PRACTICES

SHAPES AND COLOR IS A CONNECTION









KEEP MODULES AWAY FROM HEAT SOURCES

BEST GOOD WORST

MOUNT WITH LOGO FACING UP AND/OR OUT TO A SIDE

SOLDER WIRE TIPS BEFORE SECURING TO TERMINALS

TERMINALS SHOULD BE SNUG AND NOT OVER-TIGHTENED

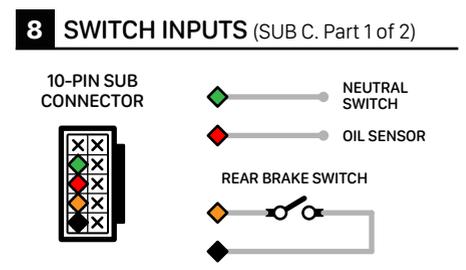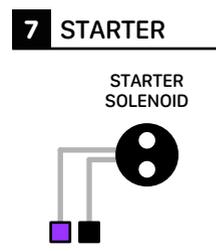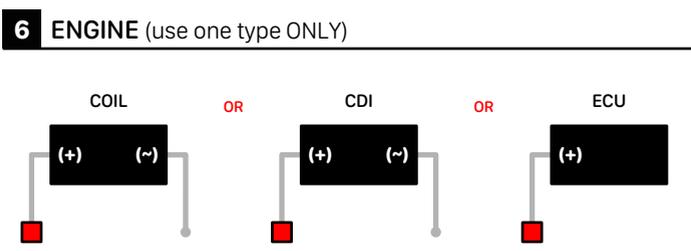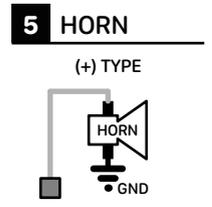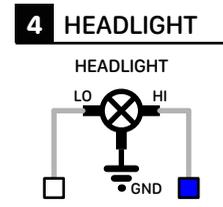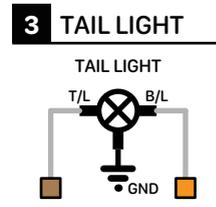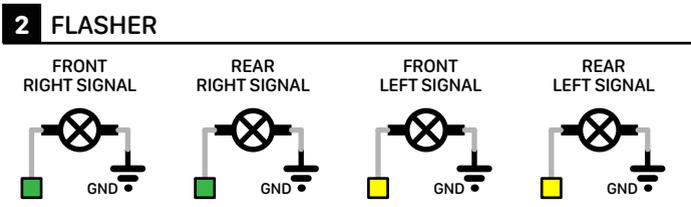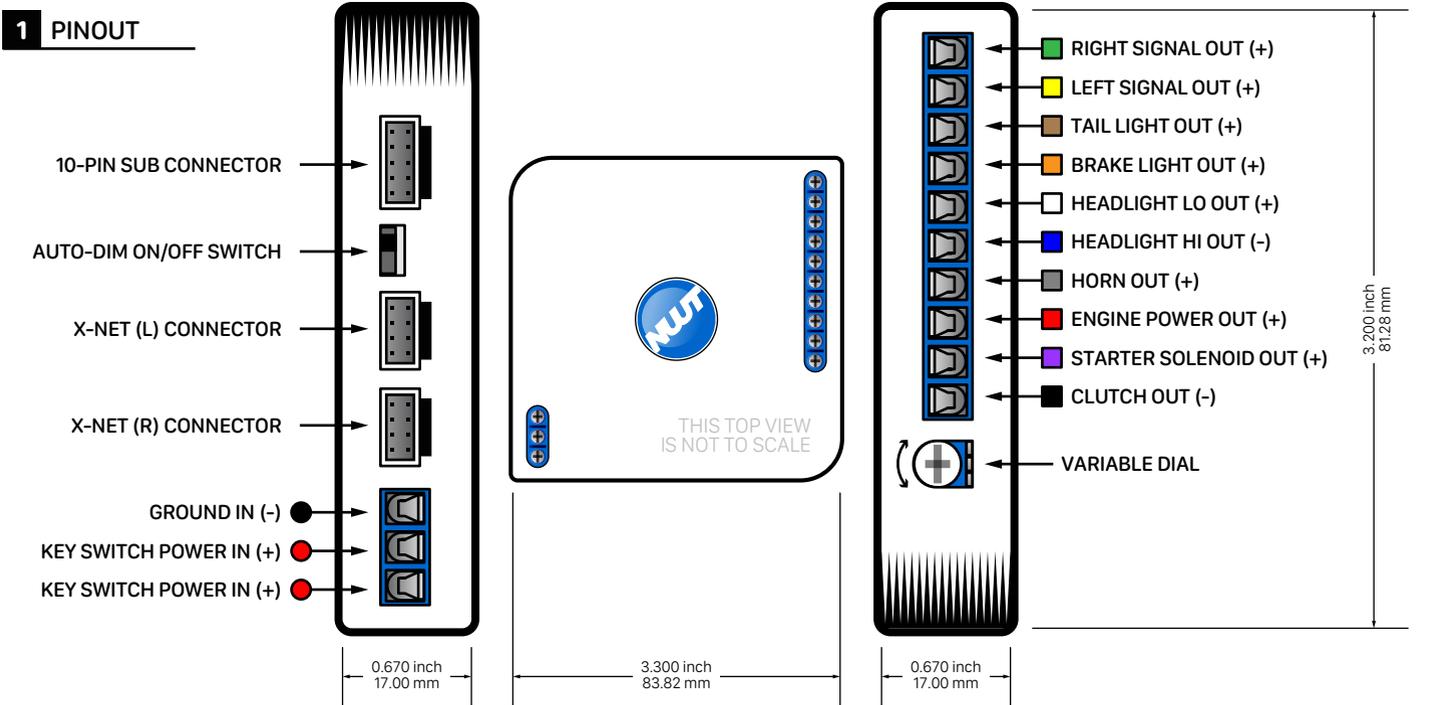

IMPORTANT

WIRING CONNECTION & INSTALLATION BEST PRACTICES

SHAPES AND COLOR IS A CONNECTION

KEEP MODULES AWAY FROM HEAT SOURCES


BEST GOOD WORST

MOUNT WITH LOGO FACING UP AND/OR OUT TO A SIDE


SOLDER WIRE TIPS BEFORE SECURING TO TERMINALS

TERMINALS SHOULD BE SNUG AND NOT OVER-TIGHTENED

9 DASH INDICATORS (package includes resistors, SUB C. Part 2 of 2)

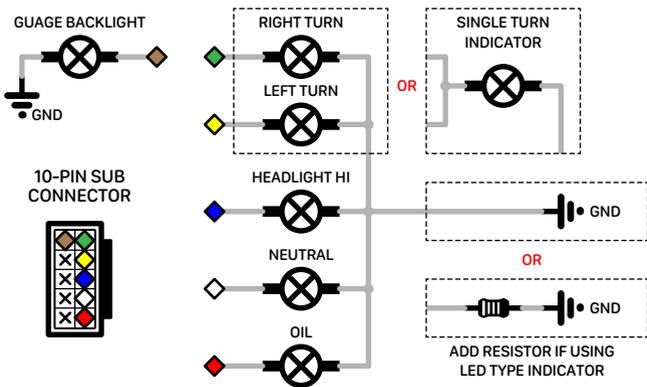

10 X-NET SWITCH INPUTS

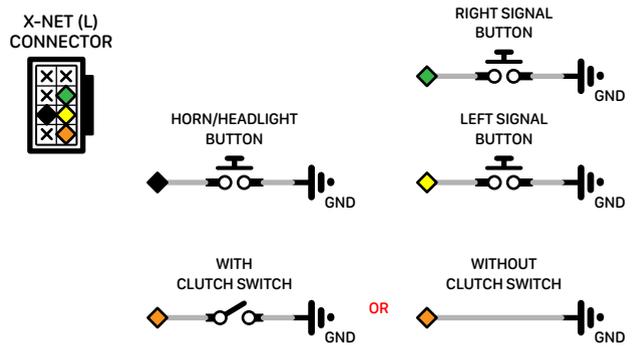

11 BUTTON FUNCTIONS

- ENGINE BUTTON**
2 QUICK PUSH ●● - to toggle between Engine Power ON/OFF
- START BUTTON**
HOLD ——— - Hold to activate Starter
- HEADLIGHT BUTTON**
1 QUICK PUSH ● - toggle between Headlight ON/OFF
- RIGHT SIGNAL BUTTON**
1 LONG PUSH ——— - to activate TURN Signal (auto cancel after 6 minutes)
1 QUICK PUSH ● - to activate LANE CHANGE Signal (auto cancel after 5 seconds)
- to cancel active TURN and LANE CHANGE Signals
3 QUICK PUSH ●●● - to toggle HAZARD Lights ON/OFF (for **LEFT Hand Drive** countries)
4 QUICK PUSH ●●●● - FLASH PATTERN SELECTION (for **RIGHT Hand Drive** countries)
- LEFT SIGNAL BUTTON**
1 LONG PUSH ——— - to activate TURN Signal (auto cancel after 6 minutes)
1 QUICK PUSH ● - to activate LANE CHANGE Signal (auto cancel after 5 seconds)
- to cancel active TURN and LANE CHANGE Signals
3 QUICK PUSH ●●● - to toggle HAZARD Lights ON/OFF (for **RIGHT Hand Drive** countries)
4 QUICK PUSH ●●●● - FLASH PATTERN SELECTION (for **LEFT Hand Drive** countries)
- HORN/HEADLIGHT BUTTON**
1 QUICK PUSH ● - to active headlight FLASH TO PASS
2 QUICK PUSH ●● - toggle between Headlight HI/LO
HOLD ——— - sound Horn

12 FLASH PATTERN SELECTION

- Turn power ON
 - Scroll through patterns by 4 QUICK PUSH of one of the following buttons:
- For **Right Hand Drive** countries, use **RIGHT** Signal Button
For **Left Hand Drive** countries, use **LEFT** Signal Button
- PATTERN
- 1 - single burst (default)
 - 2 - double burst
 - 3 - single, then double burst
 - 4 - variable blink speed using VARIABLE DIAL
 - 5 - single sequential (sequential lights required)
 - 6 - half, then full sequential (sequential lights required)
- Leave it at desired pattern to set